


Rotor hasp lock for wooden furniture



! Free-wheeling in locked position

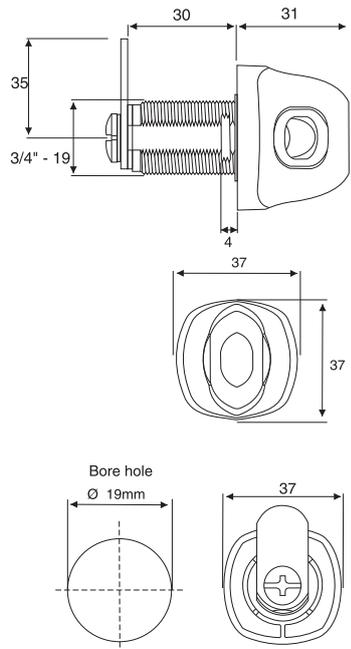

Unlocked



Locked



User instruction:

In the open position of the rotor hasp lock, it is not possible to insert the padlock. First, turn the knob handle 90° to the closed position. Insert the padlock in the knob handle to activate free wheeling. When the padlock is removed, free wheeling is stopped and the lock can be turned to open.



For wooden furniture, board thickness up to 22mm, lockable with padlock shackle diameter 4 - 8mm

Housing in Zinc alloy, turn knob in ABS plastic
 **10**

	Art. No.
90° - RH/LH	
Black matt	327100
Nickel matt	327101

- Consisting of:
- 1 x Rotor hasp lock
 - 1 x Stopper 90° RH/LH
 - 1 x Lever, straight, 35mm, steel zinc plated *
 - 1 x Fixing screw with washer for lever
 - 1 x Hexagon nut
 - 1 x Anti-twist washer

*Other levers available on request.



* Padlock not included